

# Simplify the Forming Process with the *Boman Kemp* Easy Door Buck

*Accepts any 3'-0" x 6'-8" pre hung door!*

**NEW FOR 2008!**

Door Buck is installed in concrete forms in the same way window bucks are.

Door Buck frame sits directly on footing.

Rough Framing

Accepts any pre hung door.  
(Not provided by Boman Kemp)

Drywall

Molding


Baseboard

Pre Hung Casing

Concrete Wall  
(available for most wall widths and forming systems.)

4" Finished Concrete Floor

Standard Footing


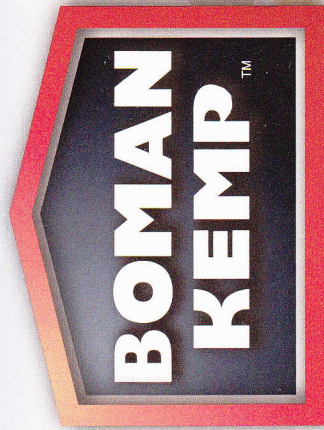


Basement Window Systems

800.733.7886 | [www.boman-kemp.com](http://www.boman-kemp.com)

# Easy Door Buck

## Boman Kemp

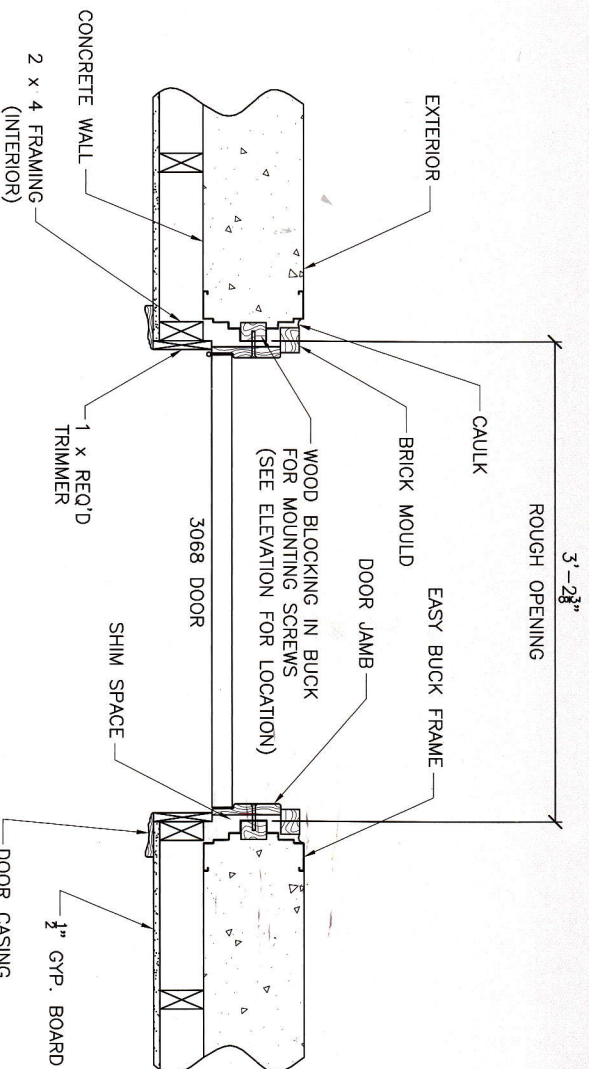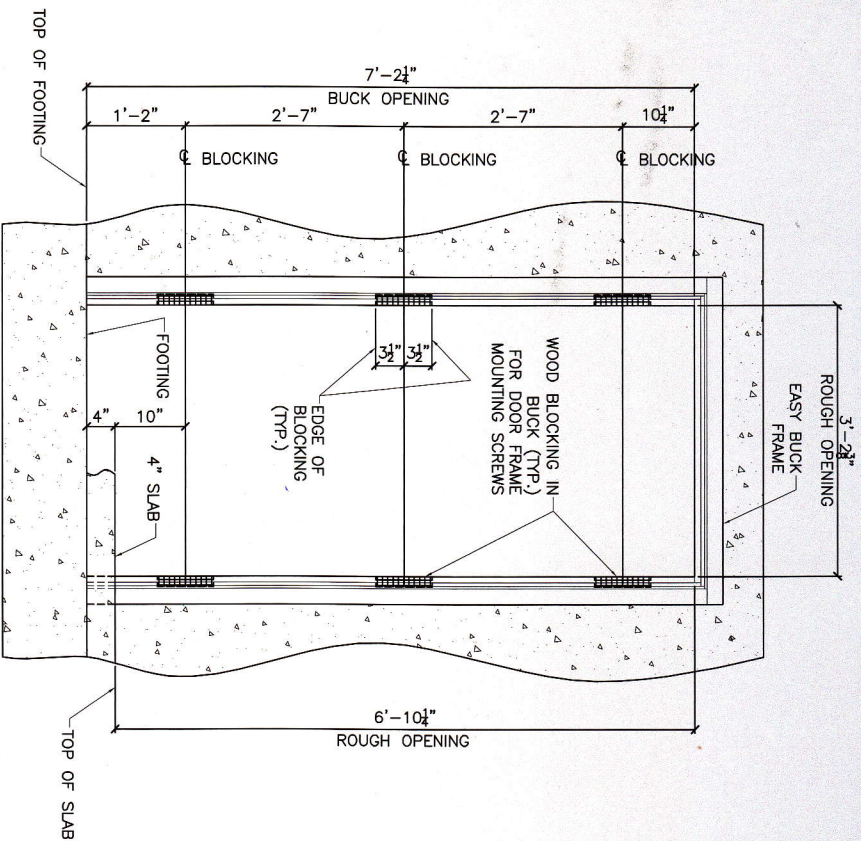


### Suggested finish details for BOMAN KEMP - EASY DOOR BUCK SYSTEM

### Wood blocking locations for BOMAN KEMP - EASY DOOR BUCK SYSTEM

## Simplify the Door Process • Add a Door to Your Next Basement

Boman Kemp's Easy Door Buck simplifies adding a door to any basement. Manufactured from the same material and process as the Easy Buck, the door buck installs in concrete forms using the same method as the Boman Kemp Easy Buck. The Boman Kemp Easy Door Buck eliminates the need for framing in openings for doors in the basement. Door bucks are compatible with all forming systems, and are available in most concrete wall widths.

Six wood anchor points pre-installed at the factory ensure smooth and easy installation of any 3'-0" x 6'-8" pre hung door. Builders can simply order an extra door when ordering the other doors for the home. Concrete contractors and finish carpenters will appreciate the ease of use and time savings gained by using a Boman Kemp Easy Door Buck.

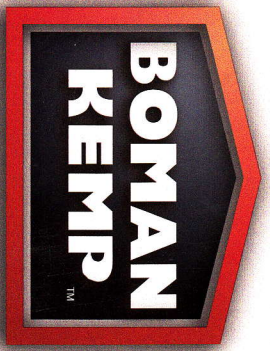

Basement Window Systems

800.733.7886 | [www.boman-kemp.com](http://www.boman-kemp.com)